
INSTRUCTION SHEET


DEE

CARTER CARBURETOR-MODEL AVS

GENERAL EXPLODED VIEW

THE GENERAL DESIGN AND PARTS SHOWN WILL VARY TO INDIVIDUAL UNITS COVERED ON THIS INSTRUCTION SHEET

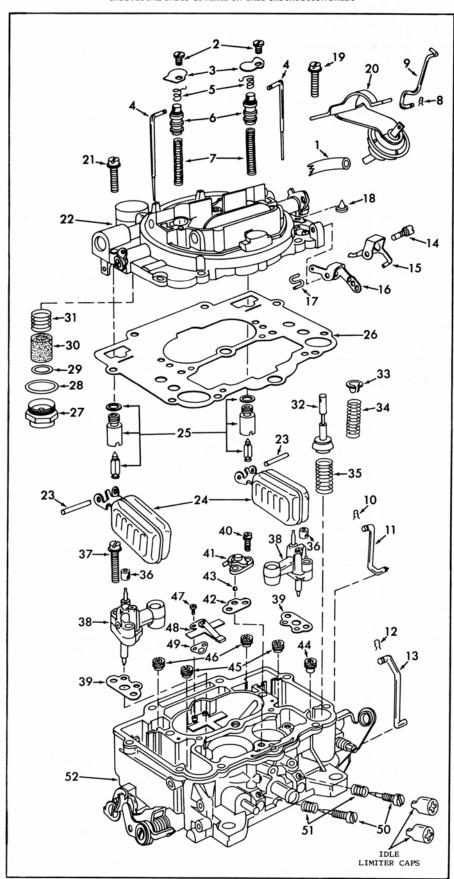

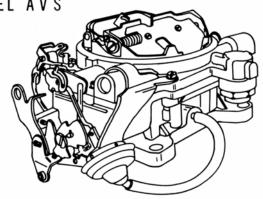

DISASSEMBLY

USE EXPLODED VIEW AS A GUIDE. THE NUMERICAL SEQUENCE MAY GENERALLY BE FOLLOWED TO DISASSEMBLE UNIT FAR ENOUGH TO PERMIT CLEANING AND INSPECTION. NOTE: CAREFULLY REMOVE RUBBER IDLE VENT VALUE (18), BEING CAREFUL NOT TO BEND SPRING ARM. IF MAIN METERING JETS (44) PRIMARY AND (45) SECONDARY ARE REMOVED, NOTE PRIMARY JETS HAVE LARGE HOLES AND SECONDARY HAVE SMALL HOLES. CAUTION:1968 AND EARLY 69 HAVE SPECIAL IDLE ADJUSTMENT SCREWS PLUGGED AND FACTORY SEALED.DO NOT REMOVE. SINGLE IDLE ADJUSTING NEEDLE HAS LEFT HAND THREAD.

LATE 1969 AND UP HAVE IDLE LIMITER CAPS.DO NOT REMOVE CAPS UNLESS SERVICE CAPS ARE AVAILABLE.

NOMENCLATURE

NO.	NO.								
1. HOSE - VACUUM BREAK 2. SCREW - COVER PLATE (2) 3. PLATE - COVER (2) 4. ROD - STEP UP (2) 5. RETAINER - STEP UP ROD (2) 6. PISTON - STEP UP (2) 7. SPRING - STEP UP PISTON (2) 8. RETAINER - VACUUM BREAK CONNECTOR ROD 9. ROD-VACUUM BREAK CONNECTOR 10. RETAINER - FAST IDLE ROD 11. ROD - FAST IDLE ROD 12. RETAINER - PUMP ROD 13. ROD - PUMP 14. SCREW - PUMP ARM 15. ARM - IDLE VENT 16. ARM - IDLE VENT 16. ARM - PUMP 17. LINK - PUMP 18. VALVE - IDLE VENT 19. SCREW - VACUUM BREAK BRACKET (2) 20. VACUUM BREAK & BRACKET ASSY. 21. SCREW - BOWL COVER (6) 22. BOWL COVER ASSY. 23. PIN - FLOAT LEVER (2) 24. FLOAT & LEVER ASSY. (2) 25. NEEDLE, SEAT & GASKET ASSY.	36. SLEEVE-VENTURI VENT(2) 37. SCREW - PRIMARY VENTURI (4) 38. VENTURI - PRIMARY (2) 39. GASKET-PRIMARY VENTURI (2) 40. SCREW - PUMP JET (2) 41. JET - PUMP 42. GASKET - PUMP JET 43. BALL - PUMP DISCHARGE 44. PUMP INTAKE CHECK 45. JET - PRIMARY MAIN (2) 46. JET - SECONDARY MAIN (2) 47. SCREW-IDLE COMPENSATOR (5OME MODELS) 49. GASKET - IDLE COMPENSATOR 50. NEEDLE - IDLE ADJUSTING (2) 51. SPRING - IDLE ADJUSTING NEEDLE (2) 52. THROTTLE BODY & FLOAT BOWL ASSY.								
CLEANING									

CLEANING

CLEANING MUST BE DONE WITH CARBURETOR DISASSEMBLED. SOAK PARTS LONG ENOUGH TO SOFTEN AND REMOVE ALL FOREIGN MATERIAL. USE (1) A CARBURETOR CLEANING SOLVENT, (2) LACQUER THINNER OR (3) DENATURED ALCOHOL. MAKE CERTAIN THE THROTTLE BORES ARE FREE OF ALL CARBON AND VARNISH DEPOSITS. WASH OFF IN SUITABLE SOLVENT. BLOW OUT ALL PASSAGES IN CASTING WITH COMPRESSED AIR AND CHECK CAREFULLY TO INSURE THOROUGH CLEANING OF OBSCURE AREAS. CAUTION: DO NOT SOAK VACUUM BREAK UNIT (20), RUBBER OR LEATHER PARTS IN SOLVENT.

REASSEMBLY

REASSEMBLE IN REVERSE ORDER OF DISASSEMBLY. NOTE SPECIAL INSTRUCTIONS AND FOLLOW NUMERICAL OUTLINE IN MAKING ADJUSTMENTS.

SPECIAL INSTRUCTIONS

PUMP PLUNGER (32) INSTALLATION, REMOVE RETAINER (33) AND SPRING (34) FROM OLD PLUNGER AND INSTALL ON NEW PLUNGER, REMOVE PAPER SLEEVE FROM LEATHER CUP. FLEX LEATHER OUTWARD SLIGHTLY. SOAK CUP IN GASOLINE, KEROSENE OR OIL FOR A FEW MINUTES PRIOR TO PLACING IN CARBURETOR.


PUMP LINK (17) IS INSTALLED WITH OFFSET TOWARD PUMP ARM.


IDLE ADJUSTING NEEDLES (49). TURN EACH NEEDLE INTO SEAT LIGHTLY AND THEN BACK OUT 1 1/2 TURNS.


1968 AND EARLY 69 WITH SINGLE IDLE ADJUSTING NEEDLE, LEFT HAND THREAD. TURN IN UNTIL LIGHTLY SEATED THEN BACK OUT 1 TURN.


PAGE 1


ADJUSTMENTS

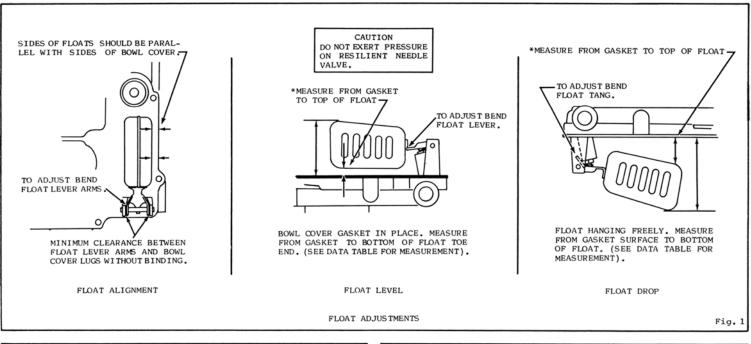


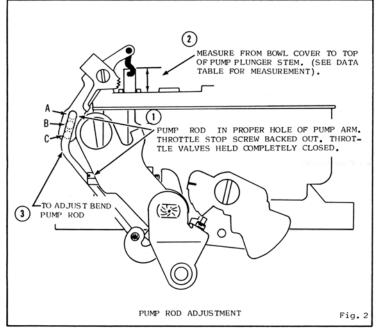


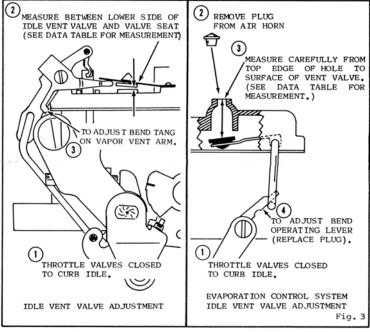

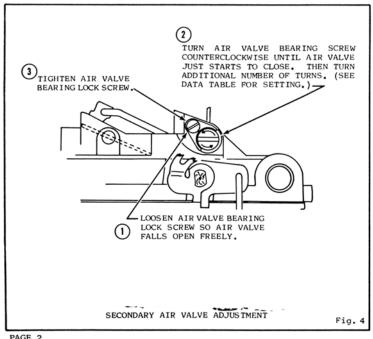


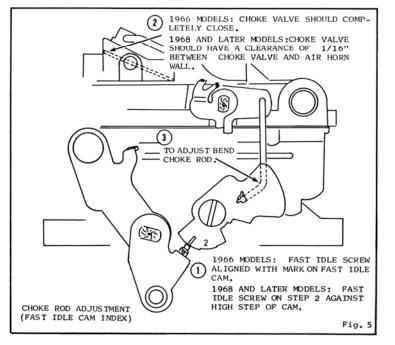


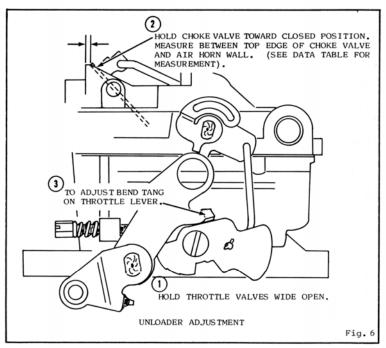


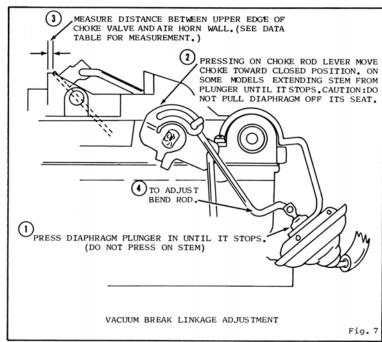


(1)

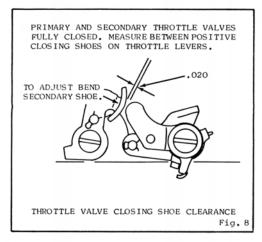

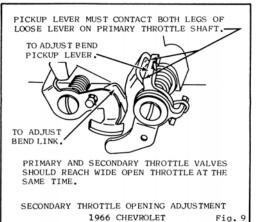

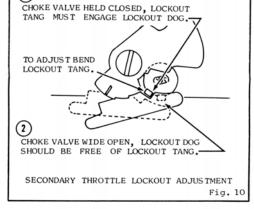

ENGINE AT OPERATING TEMP., CHOKE FULLY OPEN, ADJUST IDLE MIXTURE SCREWS IN OR OUT FOR A SMOOTH IDLE AND ADJUST IDLE STOP SCREW FOR PROPER R.P.M. (SEE DATA TABLE FOR R.P.M.) NOTE: WHERE HOT IDLE COMPENSATOR IS USED, BE SURE IT IS HELD CLOSED WHEN ADJUSTING IDLE. CAUTION:1968 & EARLY IDLE MIXTURE 1969 SINGLE IDLE MIX-TURE SCREW HAS LEFT SCREWS HAND THREAD. IDLE SPEED LATE 1969 & UP HAVE SCREW IDLE LIMITER CAPS. SLOW IDLE ADJUSTMENT Fig. 11

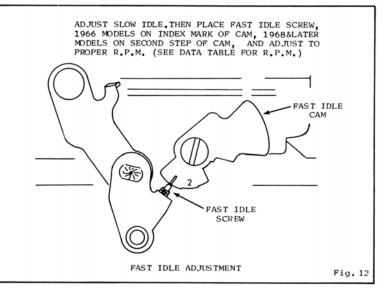

ADJUSTMENT DATA TABLE

YEAR	MAKE	FLOAT LEVEL	FLOAT DROP	PUM HOLE	P ROD DIMEN.	IDLE VENT	SECONDARY AIR VALVE	UNLOADER	VACUUM BREAK	SLOW IDLE R.P.M.	FAST IDLE R.P.M.
1966	CHEVELLE, CHEVROLET & CHEVY II 327"ENG.	1 15/32"	2"	Α	33/64"	1/32"	2 1/4 TURNS	11/64"	1/8"	450-500 A/T in Dr.	2200
1968	BARRACUDA, CHRYSLER, DART, DODGE, PLYMOUTH, VALIANT 383"ENG. A/T 340"ENG. A/T 5/T 440"ENG. A/T 5/T	5/16"* 5/16"* 7/32"* 7/32"* 7/32"* 7/32"*	13/16"* 13/16"* 23/32"* 23/32"* 23/32"*	8 8 8 8 8 8	7/16" 7/ 16" 7/16" 7/16" 7/16" 7/16"	1/8" 1/8" 1/8" 1/8" 1/8"	2 TURNS	1/4" 1/4" 1/4" 1/4" 1/4"	3/32" 3/16" 5/64" 3/16" 5/32" 3/16"	650 N. 650 N. 650 N. 700 N. 650 N.	1600 1600 1400 1700 1400 1600
1969	BARRACUDA, CHRYSLER, DART, DODGE, PLYMOUTH 340"ENG. A/T 5/T 383"ENG. A/T S/T 440"ENG. A/T S/T	7/32"* 7/32"* 5/16"* 5/16"* 7/32"* 7/32"*	23/32"* 23/32"* 13/16"* 13/16"* 23/32"*	B B B B B	7/16" 7/16" 7/16" 7/16" 7/16" 7/16"	1/8" 1/8" 1/8" 1/8" 1/8"	2 TURNS 2 TURNS 2 TURNS 2 TURNS 2 TURNS 2 TURNS	1/4" 1/4" 1/4" 1/4" 1/4"	5/64" 7/64" 5/64" 7/64" 7/64" 5/32"	700 N. 750 N. 650 N. 700 N. 650 N. 700 N.	1700 1700 1700 1700 1700 1700
1970	BARRACUDA, CHRYSLER, DART, DODGE, PLYMOUTH, VALIANT CAS 340"ENG. A/T ECS 340"ENG. A/T CAS 383"ENG. A/T ECS 383"ENG. A/T ECS 440"ENG. A/L/T ECS 440"ENG. ALL/T	7/32"* 7/32"* 7/32"* 7/32"* 5/16"* 5/16"* 7/32"*	23/32"* 23/32"* 23/32"* 23/32"* 13/16"* 13/16"* 23/32"*	8 8 8 8 8 8 8 8	7/16" 7/16" 7/16" 7/16" 7/16" 7/16" 7/16"	1/8" 1/8" 3/4" 3/4" 1/8" 3/4" 1/8" 3/4"	2 TURNS	1/4" 1/4" 1/4" 1/4" 1/4" 1/4"	5/64" 7/64" 5/64" 7/64" 3/32" 3/32" 5/32" 5/32"	900N 950N 900N 950N 700N 700N 800A/T 900S/T	2000 2000 2000 2000 1700 1700 1800A/T 2000S/T
1971	BARRACUDA, CHRYSLER, DART,DODGE,PLYMOUTH, VALIANT 383" ENG. A/T 440" STD.ENG. A/T 440" HIGH PERF. ENG. ALL/T	5/16''* 7/32''* 7/32''*	23/32"* 23/32"* 23/32"*	В В	9/16" 7/16" 7/16"	3/4" 3/4" 3/4"	2½ TURNS 2½ TURNS 2½ TURNS	1/4" 1/4" 1/4"	5/64" 5/32" 5/32"	800 N. 750 N. 900 N.	1800 1600 1800S/T 2000A/T

CAS=CLEANER AIR SYSTEM

ECS=EVAPORATION CONTROL SYSTEM