

DORMAN EXCLUSIVE OFFERINGS

OE Consolidation: Upgraded design consolidates 8 OE parts into just one Dorman part



927-100
Buick 2009-97,
Chevrolet 2013-97,
Oldsmobile 2004-97,
Pontiac 2008-97

COMPLETE KITS: Includes brackets, bushings, links and mounting bolts for a complete repair



ORIGINAL TUBULAR DESIGN:

Corrosion with this design leads to ends splitting and eventually breaking



ENGINEERED SOLID FORGED DESIGN:

Solid forged design eliminated possibly of ends splitting or breaking



Failure Mode:


ORIGINAL DESIGN:

- Original tubular design rusts and corrodes leading to the ends splitting and breaking
- Over time sway bars lose spring, limiting effectiveness



Failure Results in:

UNDERSTEER: Reduced Spring Rate Causes Understeer - body roll will cause the vehicle to turn less sharply than the intended paths lose spring, limiting effectiveness

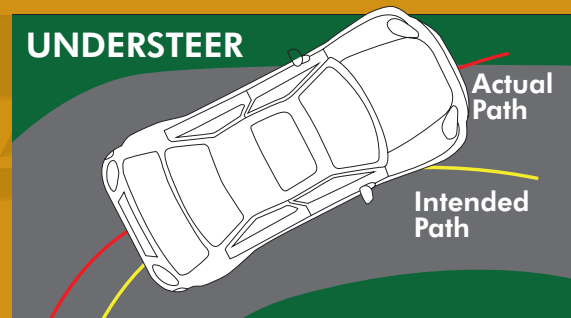

APPLICATIONS

HIGHLIGHTED SWAY BAR KITS

Make	Year	Dorman #
Buick	2009-97	927-100
Chevrolet	2013-97	927-100
Oldsmobile	2004-97	927-100
Pontiac	2008-97	927-100
Cadillac	2000-99	927-101
Chevrolet	2000-88	927-101
GMC	2000-88	927-101
Chevrolet	2002-95	927-102
GMC	2002-96	927-102
Chevrolet	2005-90	927-103
GMC	2005-90	927-103
Chevrolet	2005-85	927-104
GMC	2005-85	927-104
Cadillac	2006-02	927-105
Chevrolet	2006-00	927-105
GMC	2006-00	927-105
Buick	1999-94	927-107
Oldsmobile	1999-94	927-107
Oldsmobile	1999-96	927-107
Oldsmobile	1998-97	927-107
Chevrolet	2005-97	927-108
Oldsmobile	2004-97	927-108
Pontiac	2005-97	927-108
Buick	2009-97	927-110
Chevrolet	2011-00	927-110
Oldsmobile	2002-98	927-110
Pontiac	2008-97	927-110
Chevrolet	2007-99	927-120
GMC	2007-99	927-120

HIGHLIGHTED SWAY BAR KITS

Make	Year	Dorman #
Chevrolet	2013-99	927-121
GMC	2013-99	927-121
Hummer	2009-03	927-121
Buick	2006-02	927-122
Chevrolet	2006-05	927-122
Pontiac	2006-01	927-122
Saturn	2006-05	927-122
Cadillac	2010-03	927-130
Chevrolet	2002-82	927-139
Pontiac	2002-82	927-139
Cadillac	2010-07	927-140
Chevrolet	2010-07	927-140
GMC	2010-07	927-140
Ford	2005-02	927-148
Mecury	2005-02	927-148
Jeep	2004-99	927-158
Ford	2010-92	927-159
Lincoln	1997-91	927-159
Mecury	2010-92	927-159
Jeep	2004-99	927-160
Jeep	2006-97	927-164
jeep	1998-94	927-167
Buick	1979-64	927-175
Cadillac	1979-76	927-175
Chevrolet	1981-64	927-175
GMC	1977-71	927-175
Oldsmobile	1979-64	927-175
Pontiac	1981-64	927-175
General Motor	1996-64	927-178

For complete Sway Bar Kit coverage, visit DormanProducts.com

NEW PRODUCTS • NEW OPPORTUNITIES • NEW SOLUTIONS



74964-SwarBarKits_SS 9-26

Dorman Products, Inc. | 3400 East Walnut Street | Colmar, PA 18915

Corporate Office and Customer Service: 1-800-523-2492

New Product Idea Hotline: 1-800-336-3575

©2014 No reproduction in whole or in part without prior written approval.

