


# BRExhaust™

A **MAGNAFLOW** GROUP COMPANY

## INSTALLATION INSTRUCTIONS | PART NO. 106-0560

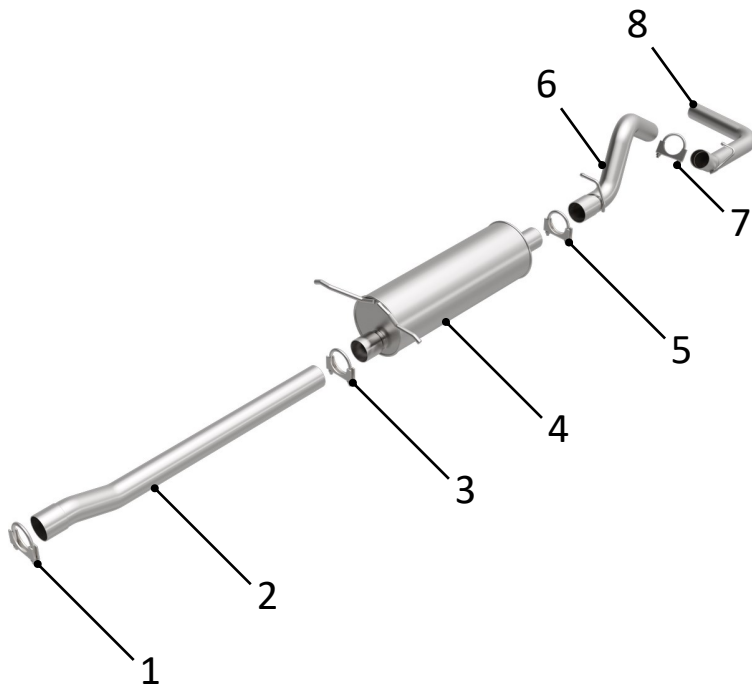

### WARNING:

When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

#### STEP 1:

(Carefully read all instructions before installation) Disconnect the vehicle's battery before removal of the OEM exhaust system. This will prevent electrical accidents and will reset the computer if it applies to the vehicle. Remove existing exhaust system from the vehicle. Only remove parts that will be replaced. Clean existing flange with a wire brush to ensure proper sealing.

#### STEP 2:

For 112" wheelbase vehicles you will need to trim 19" off the **[2] Inlet Pipe** measuring from the non-expanded outlet end of the pipe. 131" wheelbase vehicles will not require any trimming of the **[2] Inlet Pipe**.

#### STEP 3:

Attach the **[2] Inlet Pipe** to existing exhaust with supplied **[1] Clamp**.

#### STEP 4:

Attach **[4] Muffler Assembly** to existing isolators and **[2] Inlet Pipe** with supplied **[3] Clamp**.

#### STEP 5:

Attach **[6] Over Axle Pipe Assembly** to existing isolators and **[4] Muffler Assembly** with supplied **[5] Clamp**.

#### STEP 6:

Attach **[8] Tail Pipe Assembly** to existing isolators and **[6] Over Axle Pipe Assembly** with supplied **[7] Clamp**.

#### STEP 7:

Ensure new exhaust is not contacting any portion of the underbody of the vehicle or drivetrain.

#### STEP 8:

Tighten all clamps starting from rear of the vehicle. **(DO NOT EXCEED 30FT-LB WHEN TIGHTENING CLAMP AND CHECK ALL CLAMPS AFTER 50 MILES. RETIGHTEN IF NECESSARY)**



**BRExhaust** recommends professional installation for all products

**Technical Support: 1-800-631-7271**

**BRExhaust — 1901 Corporate Ctr, Oceanside, CA 92056**

[www.brexhaust.com](http://www.brexhaust.com)