


BRExhaust™

A **MAGNAFLOW** GROUP COMPANY

INSTALLATION INSTRUCTIONS | PART NO. 106-0586

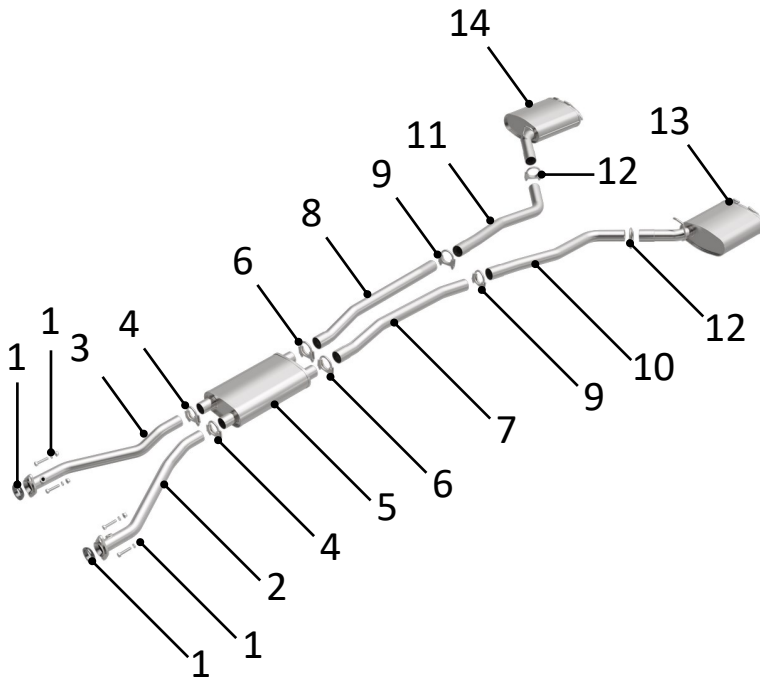

STEP 1: (Carefully read all instructions before installation)
Disconnect the vehicle's battery before removal of the OEM exhaust system. This will prevent electrical accidents and will reset the computer if it applies to the vehicle. Remove existing exhaust system from the vehicle. Only remove parts that will be replaced. Clean existing flange with a wire brush to ensure proper sealing.

STEP 2:
Attach driver side **[2] Inlet Pipe Assembly** and passenger side **[3] Inlet Pipe Assembly** to existing exhaust with supplied **[1] Hardware and Gaskets**.

STEP 3:
Attach **[5] [Muffler]** to driver side **[2] Inlet Pipe Assembly** and passenger side **[3] Inlet Pipe Assembly** with supplied **[4] Clamps**.

STEP 4:
Attach driver side front **[7] Intermediate Pipe** and passenger side front **[8] Intermediate Pipe** to **[5] [Muffler]** with supplied **[6] Clamps**.

STEP 5:
Attach driver side rear **[10] Intermediate Pipe** to driver side front **[7] Intermediate Pipe**, and passenger side rear **[11] Intermediate Pipe** to passenger side front **[8] Intermediate Pipe** with supplied **[9] Clamps**.

STEP 6:
Attach driver side **[13] Muffler Assembly** to existing isolators and driver side rear **[10] Intermediate Pipe**, and passenger side **[14] Muffler Assembly** to existing isolators and passenger side rear **[11] Intermediate Pipe** with supplied **[12] Clamps**.

STEP 7: Ensure new exhaust is not contacting any portion of the underbody of the vehicle or drivetrain.

STEP 9: Tighten all clamps starting from rear of the vehicle. (**DO NOT EXCEED 30FT-LB WHEN TIGHTENING CLAMP AND CHECK ALL CLAMPS AFTER 50 MILES. RETIGHTEN IF NECESSARY**)

WARNING:

When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.



BRExhaust recommends professional installation for all products

Technical Support: 1-800-631-7271

BRExhaust — 1901 Corporate Ctr, Oceanside, CA 92056

www.brexhaust.com