



ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

Escalade, Suburban, Tahoe, Yukon, Silverado, Sierra 2000-05

The window regulator you have received will vary in appearance from the Original Equipment that you are removing. The Original Equipment is held in place by 4 mounting bolts and does not provide hardware, where as the replacement has two mounting studs at the bottom of the regulator track and two mounting bolts at the top of the regulator track. This Dorman regulator is also supplied with two M6 x 1.0 mm nuts.

Original Equipment




Original Equipment Has 3rd Mounting Bracket

Replacement Part



Replacement Part Does Not Have 3rd Mounting Bracket

Dorman Regulator

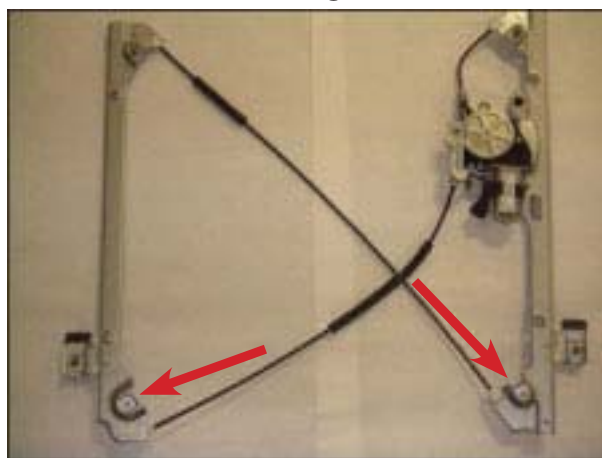

Dorman Regulator Has Two Welded Studs For Mounting To Door Similar To Replacement

Disclaimer:

Even though every attempt is made to ensure this information is complete and accurate, it is impossible to account for all possible circumstances or situations. Please consult with a qualified auto technician before attempting to perform any work you are not qualified to do. Automobiles can be hazardous to work on; be sure to take all necessary safety precautions. Failure to do so may result in property damage or personal injury. Certain motor vehicle standards and performance requirements may apply to your motor vehicle (such as Federal Motor Vehicle Safety Standards by the National Highway Traffic Safety Administration). Be sure that your work is performed in accordance with such standards and that you do not disable any motor vehicle safety feature.